



OPERATING MANUAL

ROTO OVEN


MARANA FORNI S.R.L. UNIPERSONALE

Via Turbina n. 98 – 37139 Verona – Italia


Tel. +39 045 6704503 - Fax +39 045 7156118

R.E.A.: VR-408824 – Reg. Impr. VR 04298010234

C.F. e Partita IVA: IT 04298010234 - Capitale Sociale Euro 200.000,00 Int. Vers.

 Skype contact: maranaforni info@maranaforni.it www.maranaforni.it

OPERATOR'S PANEL

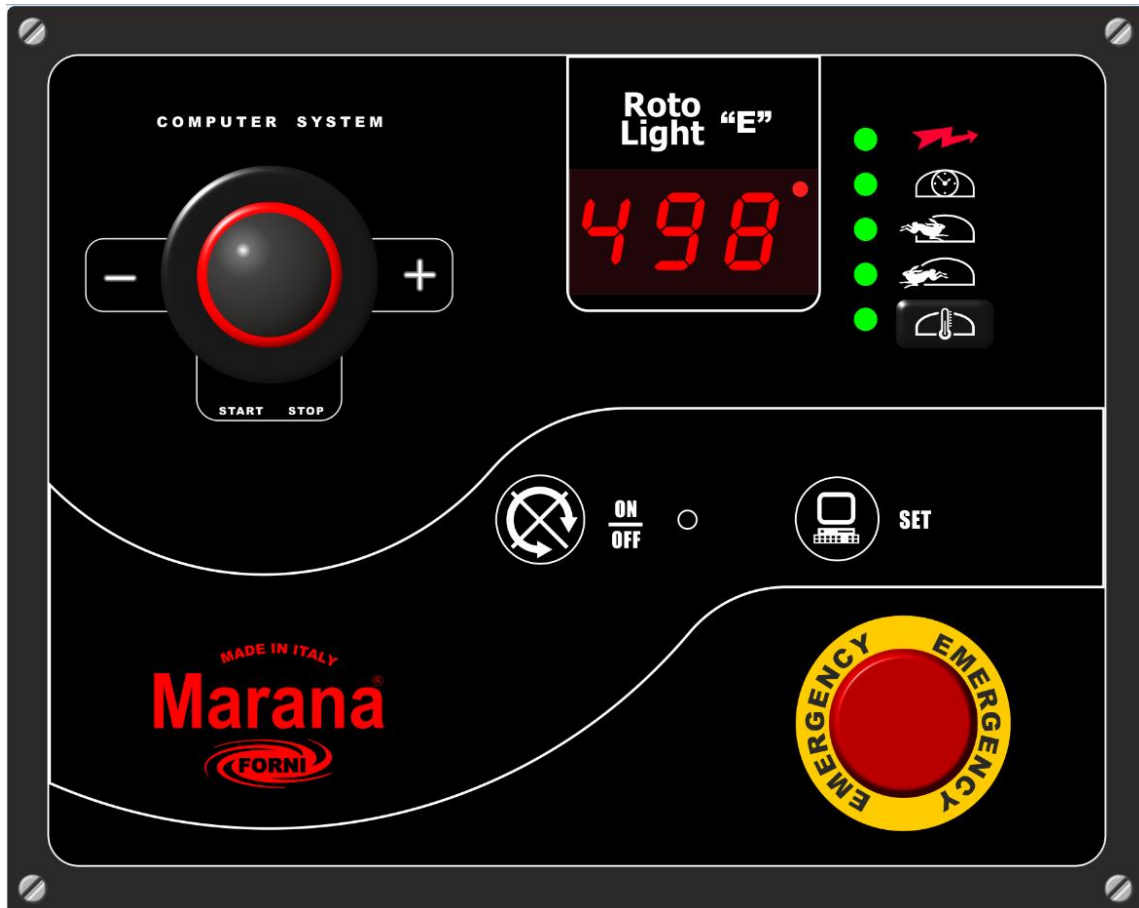

USER'S INSTRUCTIONS FOR THE "ROTOLIGHT" CONTROL PANEL

Index

1. TO SWITCH ON / OFF
 2. BASE LEVEL COOKING
 3. TO IMMEDIATELY HALT COOKING IN PROGRESS
 4. TO STOP ROTATION OF THE PLATE
 5. TO VARY THE COOKING TIME
 6. TO VARY THE ROTATION SPEED OF THE PLATE DURING COOKING
 7. TO VARY THE ROTATION SPEED OF THE PLATE DURING "EXTRACTION"
 8. TO CHANGE ROTATION DIRECTION OF THE PLATE
 9. TO CHANGE THE SOUND OF THE ACOUSTIC SIGNALS
 10. CONTROL VERSION OF PROGRAMME
-
-

1. TO SWITCH ON / OFF

With the green light indicating that the electricity supply is connected (lightning), press the **ON/OFF button** for a moment; the display will light up indicating, after about ten seconds, the temperature reading inside the oven (red light above the thermometer will be on); the rotation speed of the plate will be that of "oven standby".

To switch off the console, press the **ON/OFF** button for a few seconds until it switches off. Use the **"EMERGENCY"** button only in case of necessity.

2. BASE LEVEL COOKING

Move the joystick down for a moment (towards the lit dot above the "clock" symbol); the rotation speed of the plate will change to the optimal speed for cooking; the display will show the cooking time remaining, with time being counted down; ten seconds before cooking is finished, there will be a short warning sound indicating "cooking almost finished" and at the end there will be three short sounds.

3. TO IMMEDIATELY HALT COOKING IN PROGRESS

For all cooking methods or pre-heating the plate, keep the joystick pressed downwards for a couple of seconds. Cooking or pre-heating will stop immediately, and the plate will descend to the base (function RESET).

4. TO STOP ROTATION OF THE PLATE

Press the ON/OFF button for a moment; the plate will slow down and then stop. Pressing the button again in the same way will cause the rotation to return to the normal speed again.

5. TO VARY THE COOKING TIME

During the "standby" phase, press the "SET" button for a moment; the green light near the clock symbol will flash; duration of the cooking time will be shown on the display. The time can be increased or decreased as desired by pushing the joystick (to the right or left); keep the SET button pressed to confirm or wait for the automatic "exit".

6. TO VARY THE ROTATION SPEED OF THE PLATE DURING COOKING

Briefly press the SET button twice (the green led with the entering hare will flash). With the joystick towards + or - increase or decrease the revolutions per minute as desired. Exit from the regulation mode by keeping the "SET" button pressed for a few seconds or wait for the automatic exit.

7. TO VARY THE ROTATION SPEED OF THE PLATE DURING "EXTRACTION"

At the end of the cooking time, the extraction time begins. The rotation speed can be set by pressing the "SET" button three times (the green led with the exiting hare will flash); use the joystick to increase or decrease the revolutions/minute as desired.

Exit from the regulation mode by keeping the "SET" button pressed for a few seconds or wait for the automatic exit.

8. TO CHANGE ROTATION DIRECTION OF THE PLATE

Switch off the control panel with the ON/OFF button, keeping the joystick lever pushed towards the desired rotation direction (left or right). Switch on the control panel again with the same button, releasing the lever after hearing a short sound.

9. TO CHANGE THE SOUND OF THE ACOUSTIC SIGNALS

Keeping the "SET" button pressed even after obtaining the desired sound, move the joystick lever (towards the left or right) to modify the sound as desired; when the joystick is released, the sound will be permanently memorised.

10. CONTROL VERSION OF PROGRAMME

For the first 5 seconds after switching on (with the ON/OFF button), the display shows which release of the function programme version is being used: "r.07" = release 7.